


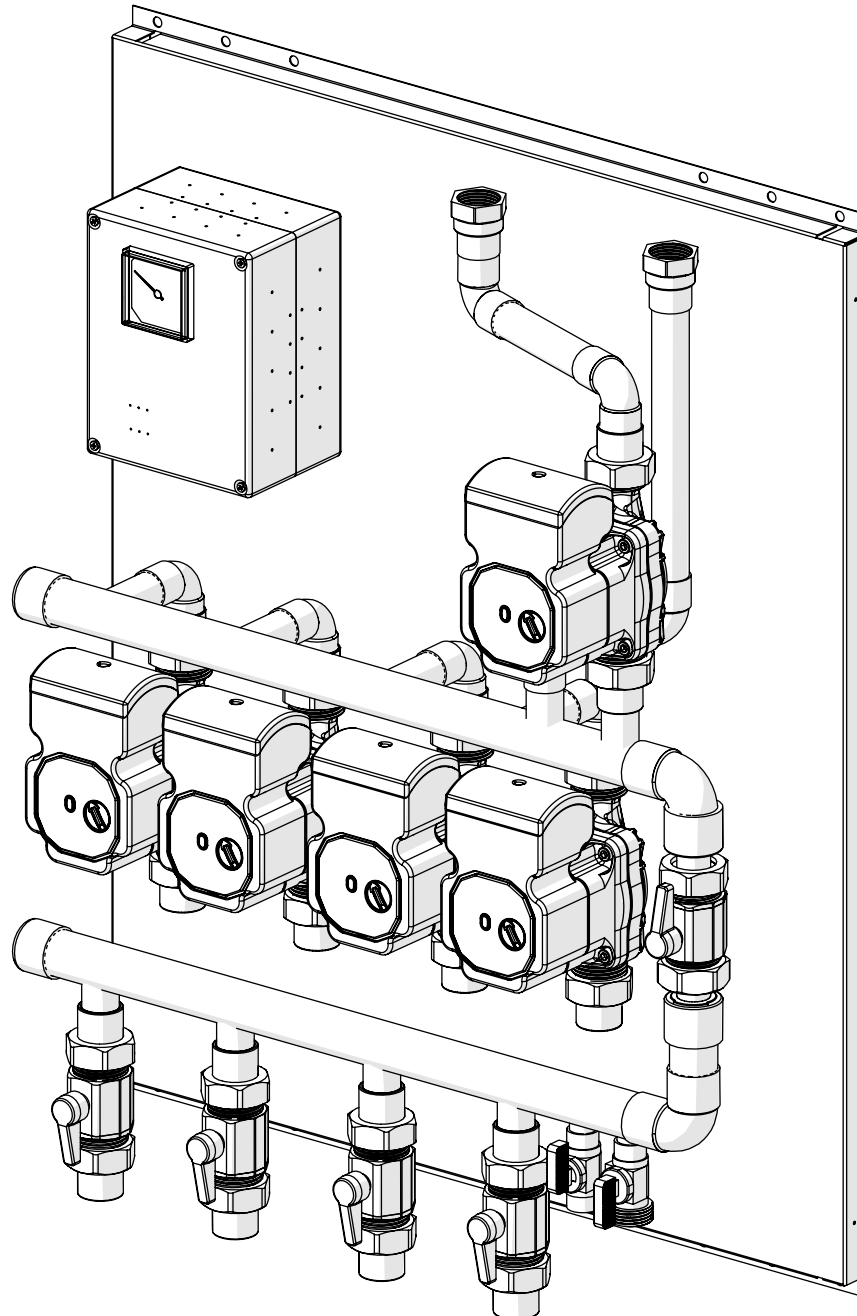

# **Navien Boiler Series**


## **Installation and Commissioning Guide**

|                            |            |
|----------------------------|------------|
| <b>Introduction.....</b>   | <b>3</b>   |
| <b>Components.....</b>     | <b>4</b>   |
| <b>Technical Data.....</b> | <b>5</b>   |
| <b>Wiring.....</b>         | <b>6-7</b> |
| <b>Commissioning.....</b>  | <b>8</b>   |
| <b>Warranty.....</b>       | <b>9</b>   |

## This User Guide is Applicable to:

### Navien Boiler Panels - DHW Priority

|                     |                                                                                        |
|---------------------|----------------------------------------------------------------------------------------|
| <b>T-BO-ND-1100</b> | Navien Boiler Panel with (1) DHW Zone Priority                                         |
| <b>T-BO-ND-1110</b> | Navien Boiler Panel with (1) DHW Zone Priority, (1) Low Temp Zone                      |
| <b>T-BO-ND-1120</b> | Navien Boiler Panel with (1) DHW Zone Priority, (2) Low Temp Zones                     |
| <b>T-BO-ND-1130</b> | Navien Boiler Panel with (1) DHW Zone Priority, (3) Low Temp Zones                     |
| <b>T-BO-ND-1140</b> | Navien Boiler Panel with (1) DHW Zone Priority, (4) Low Temp Zones                     |
| <b>T-BO-ND-1210</b> | Navien Boiler Panel with (1) DHW Zone Priority, (1) High Temp Zone, (1) Low Temp Zone  |
| <b>T-BO-ND-1220</b> | Navien Boiler Panel with (1) DHW Zone Priority, (1) High Temp Zone, (2) Low Temp Zones |

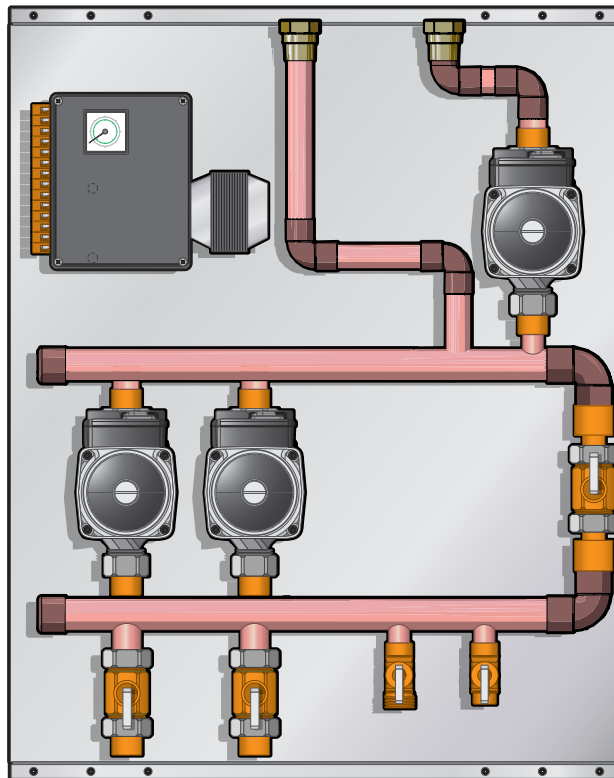

## Description

The Navien Boiler Panel is configured with expansion ports designed to accept input signals from future auxiliary boards. The panel is specifically designed to work in unison with the Navien wall-mounted condensing boiler.

Optional secondary injection mixing components, as well as low and high temperature zones can be added to the system. This enables the panel to accommodate DHW priority or fancoil applications.

The board can support a maximum of 5 pumps, including the DHW priority pump.

## Installation

Prior to mounting the panel, ensure the wall is capable of supporting the weight of the panel. Ensure that an 115V receptacle is within reach of the 5-foot cord and plug.

### \* Note:


The following parts lists and application drawings are general samplings. Each panel configuration dictates the required components, including pump type. See the Technical Data section of the manual for specific information on each part in your particular variation of the Tamas Navien Boiler Panel.

## Main Features

- Pre-designed and assembled
- Function & pressure tested
- Packaged, compact design
- Certified to CSA C22.2 No. 14-95
- Conforms to UL Standard 598A



## Technical Data

- Flow Range: 0-17 US GPM
- Head Range: 0-19 Feet
- Motors: 2 Pole, Single Phase
- Maximum Fluid Temperature: 230 °F (110 °C)
- Minimum Fluid Temperature: 36 °F (2°C)

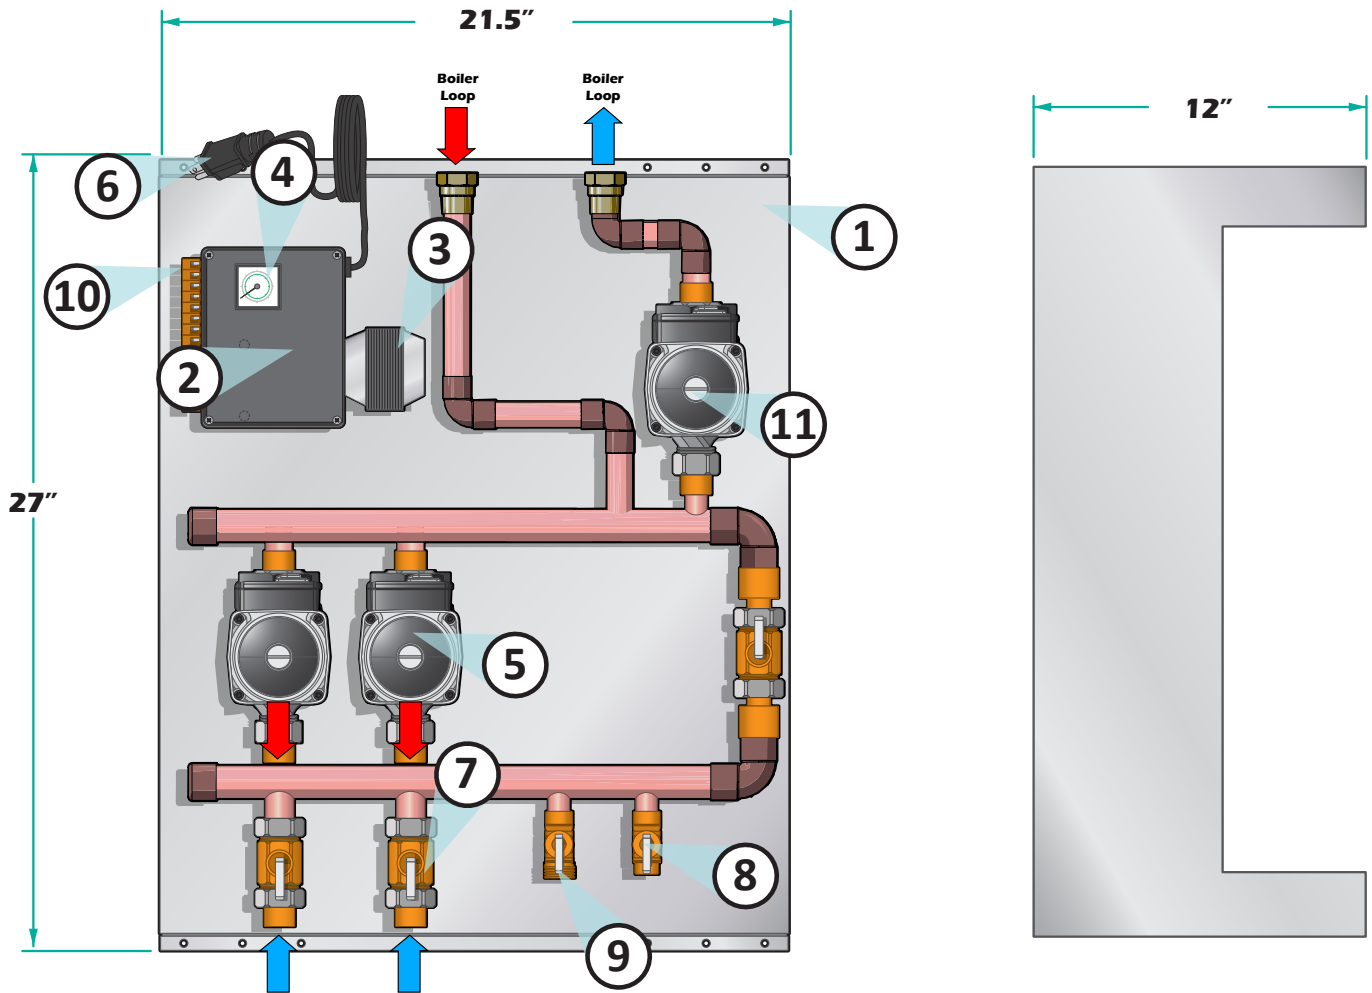

| Components |                                       |    |                        |
|------------|---------------------------------------|----|------------------------|
| 1          | 22" x 26" Galvanized Backpan          | 7  | Tamas Ball Valves      |
| 2          | Tamas Control Box with 5' Power Cable | 8  | Hose Bib Hook-Up       |
| 3          | 24V AC Transformer with Internal Fuse | 9  | Expansion Tank Hook-Up |
| 4          | Temperature Gauge                     | 10 | Terminal Block         |
| 5          | Zone Pumps UPS15-58                   | 11 | Boiler Pump UPS15-58   |
| 6          | Power Cord                            |    |                        |

**Pump Circulator Taco 0015e3 (3 Speed Pump)**

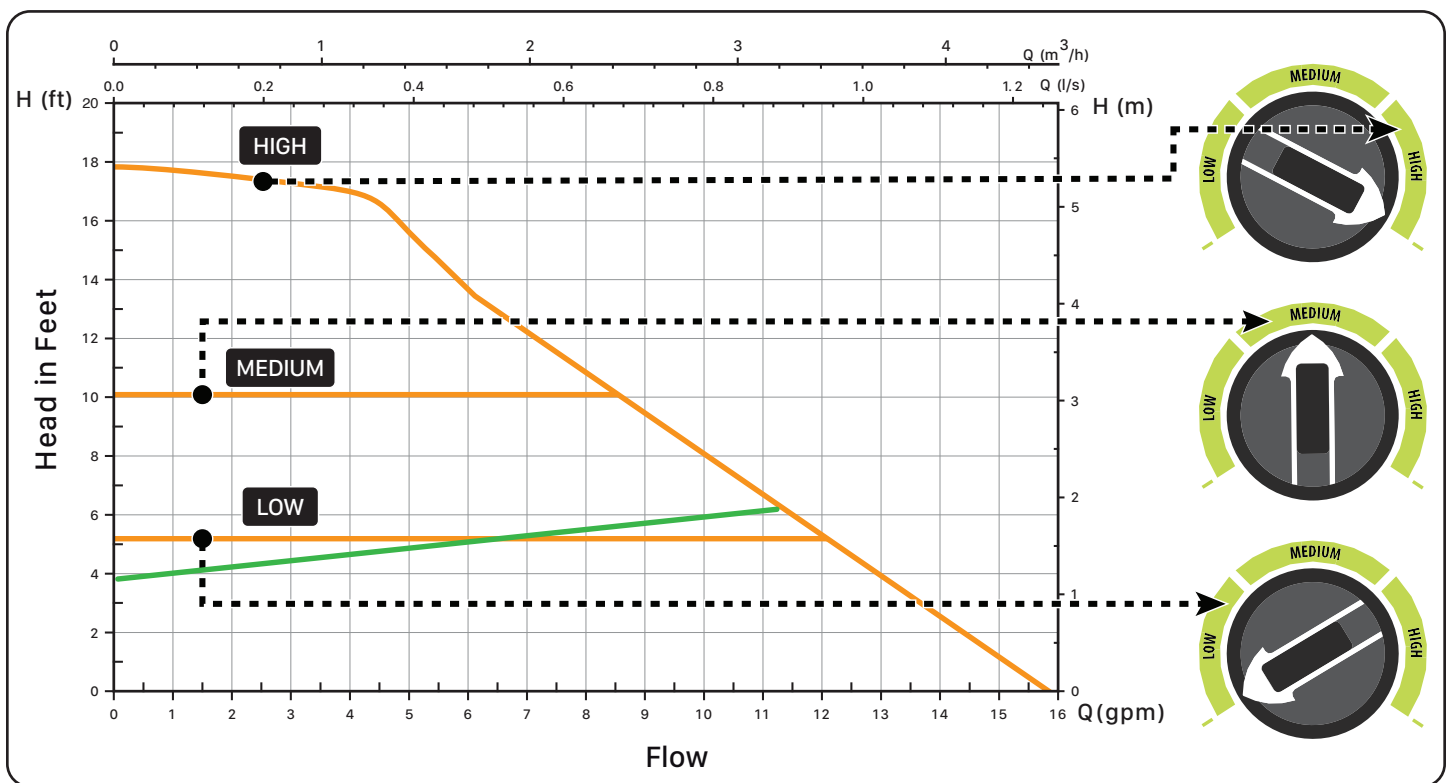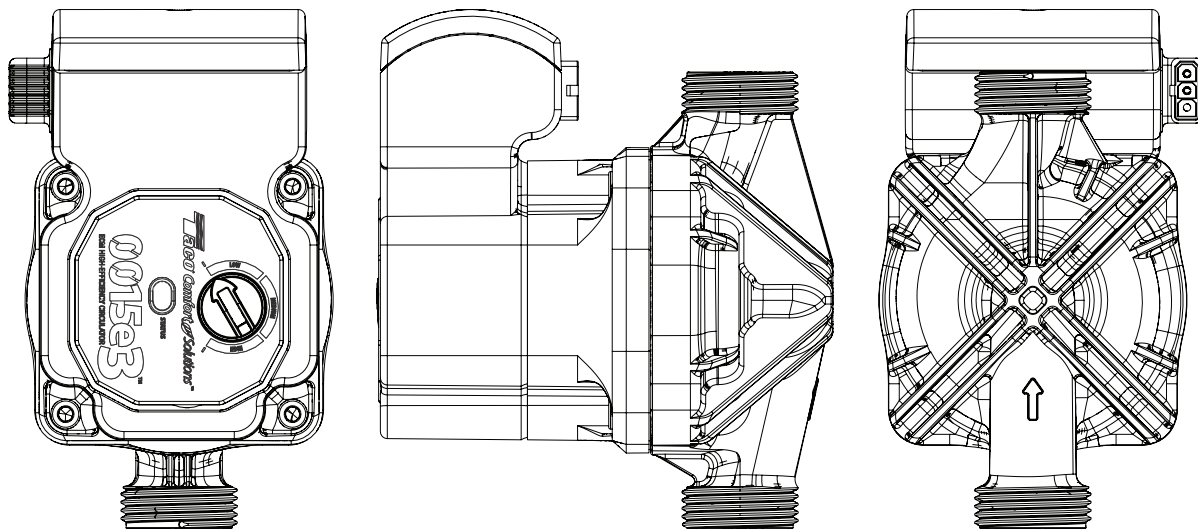


Flow Range: 0-16 GPM  
Head Range (ft): 0-18'  
Max. Water Temp.: 230°F (110°C)  
Min. Water Temp.: 36°F (2°C)

Voltage: 120V, 60 Hz Single phase  
Max. Operating Power: 44W  
Max. AMP Rating: 0.54

## Wiring

All electrical wiring to the panel (including grounding) must conform to local electrical codes and/or National Electrical Code, ANS/NFPA No. 70-latest edition, or the Canadian Electrical Code, C22.1- Part 1.

### Connections Boiler Panel – Boiler

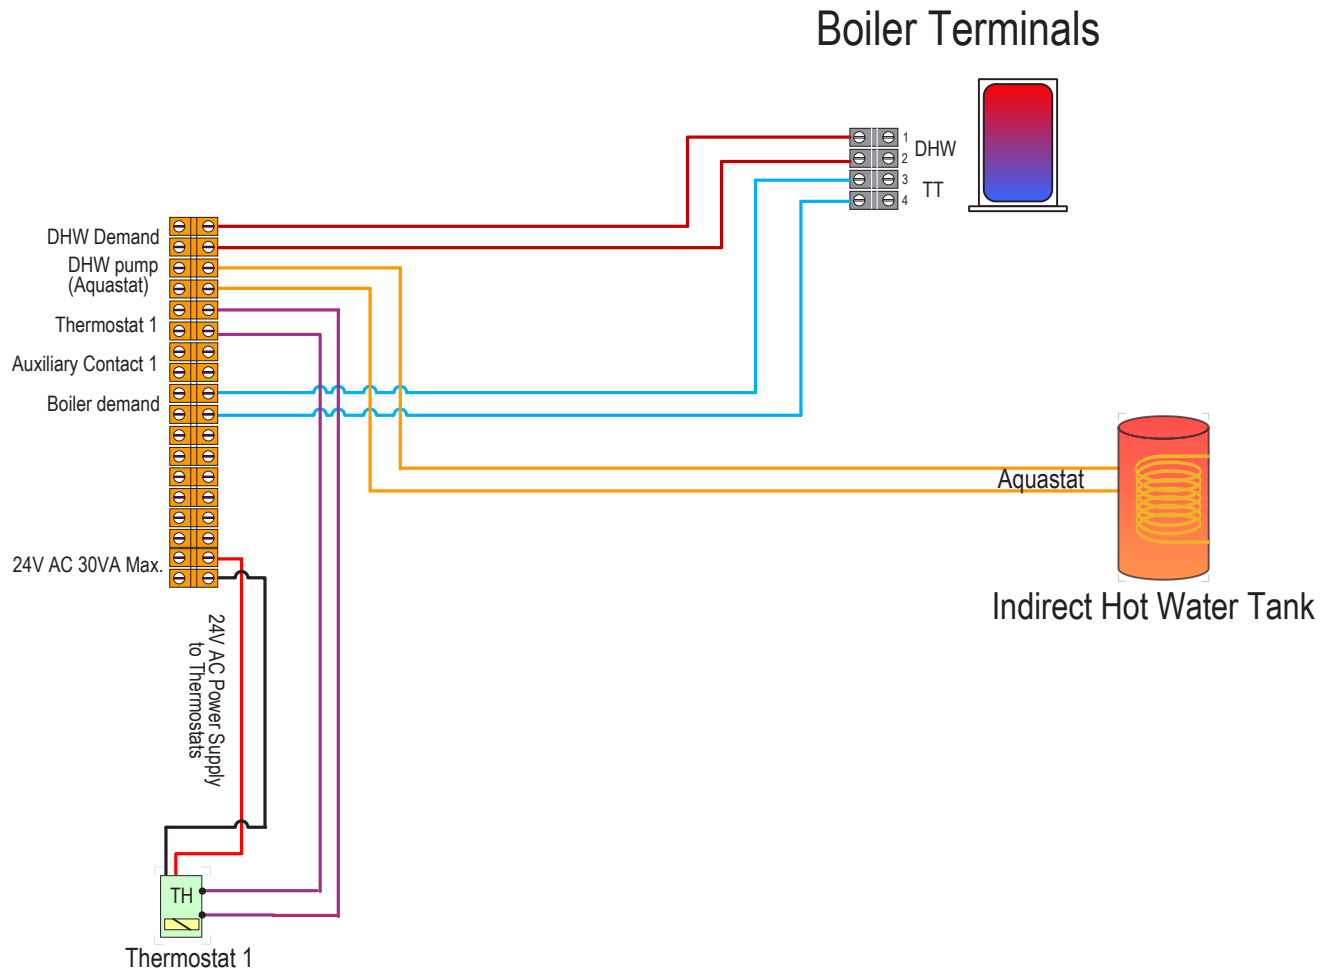


## Thermostat 1-2


Connect the thermostat for a space heating zone to the terminal block on the Tamas Panel. Do not supply 24V power to the thermostat circuits or attempt to supply 24V AC for any other application.

For the thermostats that require continuous 24V AC power source, connect the thermostat power input to the 24V AC terminal on the Tamas Panel.


### 2 Wire Thermostat

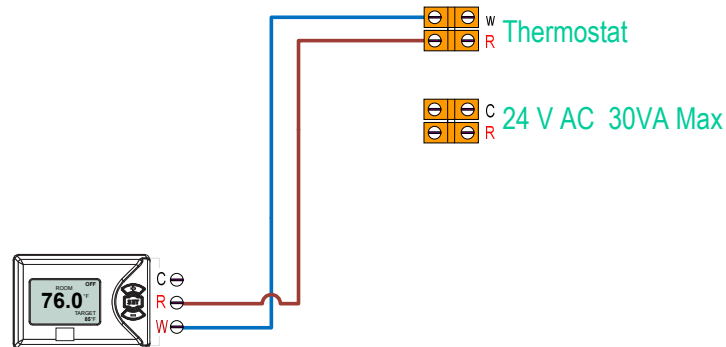

### 3 Wire Thermostat

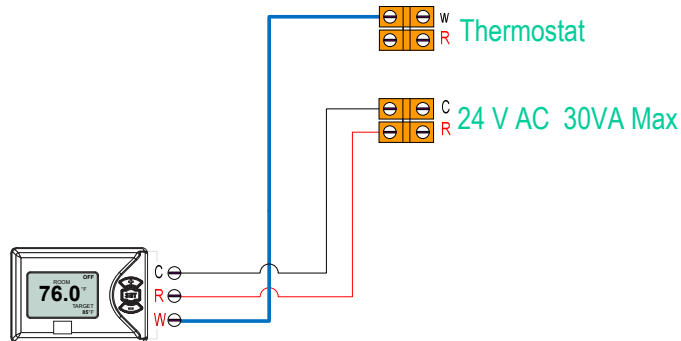


### 4 Wire Thermostat

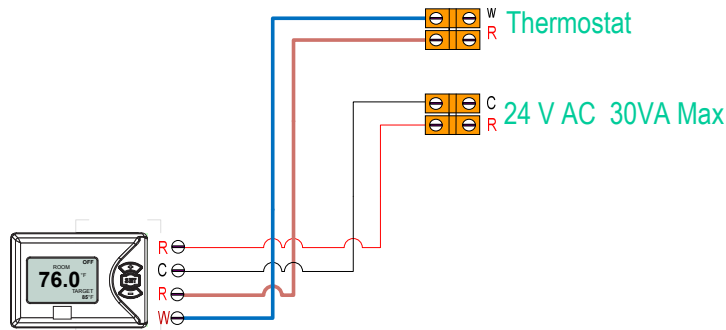

### System Filling Procedure

1. Disconnect power from the Tamas Hydronic panel
2. Close all isolation valves to the zones
3. Begin filling the panel through the provided hose bib connection on the panel
4. Open the return isolation valve on the panel
5. Begin filling the system
6. Slowly open the Manual Purging Valve on the return side of the zone line to let the air out of the system
7. After the above procedure is done, close the air Manual Purging Valve
8. Finally close all the valves to isolate the zone from the panel before moving on to the next zone.
9. Repeat this procedure based on the amount of zones on the board
10. Once all the zones have been purged, you can open all the isolation valves

**\*IMPORTANT\*** This procedure applies to filling the system one zone at a time.

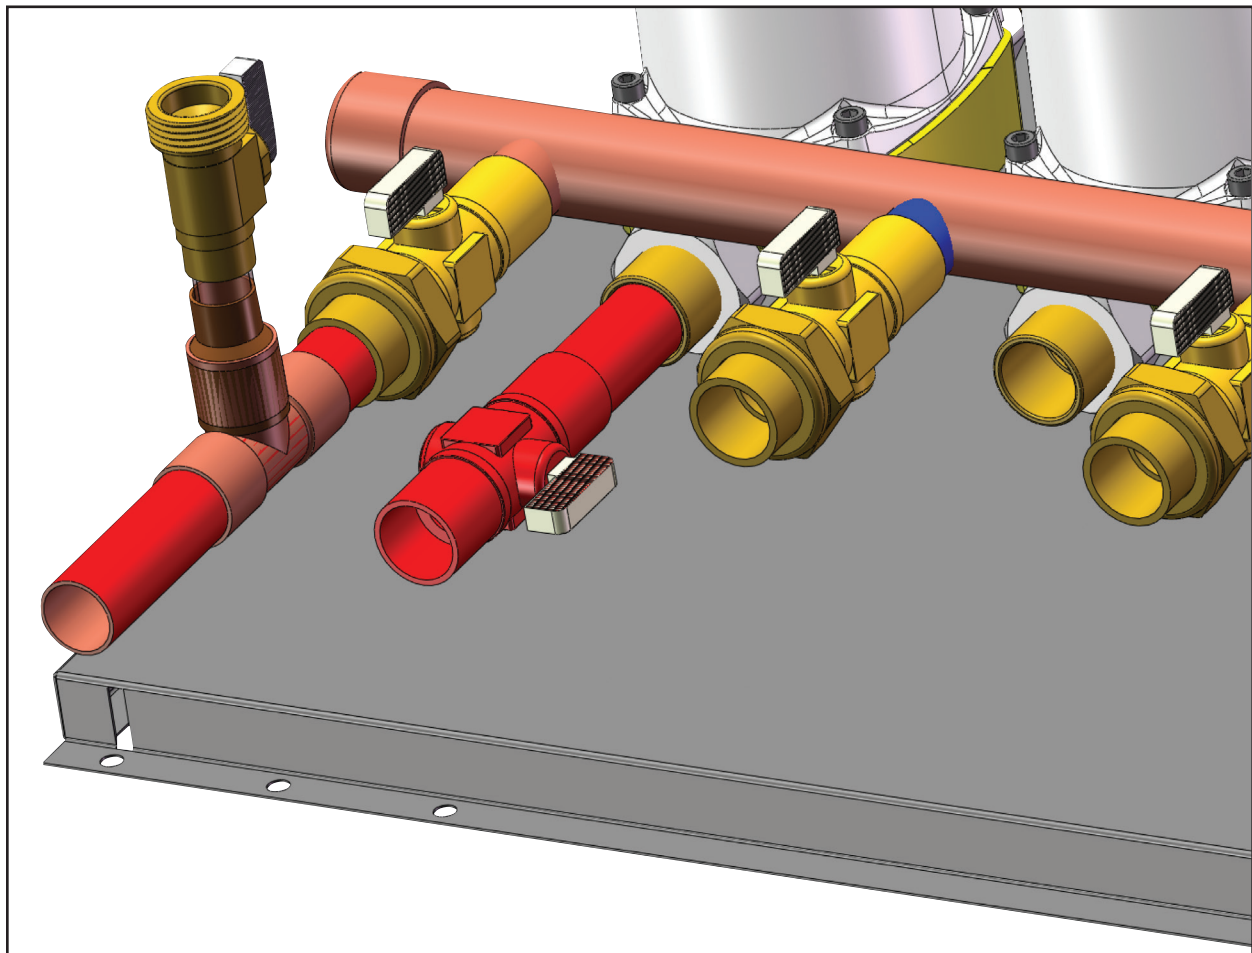



## Tamas Hydronic Panels **Navien Boiler Series** Warranty

### **Limited Warranty**

Tamas Hydronic Systems Inc. warrants each of its products to be free from defects in workmanship and materials under normal use and service for a period of 24 months from date of purchase from a Tamas Hydronic Systems inc. authorized Dealer.

If the product proves to be defective within the applicable warranty period, Tamas Hydronic Systems inc. on its sole discretion will repair or replace said product. Replacement product may be new or refurbished of equivalent or better specifications, relative to the defective product. Replacement product need not be of identical design or model. Any repair or replacement product pursuant to this warranty shall be warranted for not less than 90 days from date of such repair, irrespective of any earlier expiration of original warranty period. When Tamas Hydronic Systems Inc. Provides replacement, the defective product becomes the property of Tamas Hydronic Systems Inc.

Warranty Service, within the applicable warranty period, may be obtained by contacting your nearest Tamas Hydronics Systems inc. office via the original Authorized Agent and requesting a Return Material Authorization Number (RMA #). Proof of purchase in the form a dated invoice/receipt must be provided to expedite the issuance of a Factory RMA.

After an RMA number has been issued, the defective product must be packaged securely in the original or other suitable shipping package to ensure that it will not be damaged in transit. The RMA number must be visible on the outside of the package and a copy included inside the package. The package must be mailed or otherwise shipped back to Tamas Hydronic Systems Inc. with all costs of mailing/shipping/insurance prepaid by the warranty claimant.

Any package/s returned to Tamas Hydronic Systems Inc. without an approved and visible RMA number will be rejected and shipped back to purchaser at purchaser's expense. Tamas Hydronic Systems Inc. Reserves the right, if deemed necessary, to charge a reasonable levy for costs incurred, additional to mailing or shipping costs.

### **Limitation of Warranties.**

If the Tamas Hydronic Systems Inc. product does not operate as warranted above the purchasers sole remedy shall be, at Tamas Hydronic Systems Inc.'s option, repair or replacement. The foregoing warranties and remedies are exclusive and in lieu of all other warranties, expressed or implied, either in fact or by operation of law, statutory or otherwise, including warranties of merchantability and fitness for a particular purpose/application. Tamas Hydronic Systems Inc. neither assumes nor authorizes any other person to assume for it any other liability in connection with the sale, installation maintenance or use of Tamas Hydronic Systems Inc. products.

Tamas Hydronic Systems Inc. shall not be liable under this warranty; if its testing and examination discloses that the alleged defect in the product does not exist or was caused by the purchasers or third persons misuse, neglect, improper installation or testing, unauthorized attempts to repair or any other cause beyond the range of intended use, or by accident, fire, lightning or other hazard.

### **Limitation of Liability.**

In no event will Tamas Hydronic Systems Inc. be liable for any damages, including loss of data, loss of profits, costs of cover or other incidental, consequential or indirect damages arising out of the installation, maintenance, commissioning, performance, failure or interruption of a Tamas Hydronic Systems Inc. product, however caused and on any theory of liability. This limitation will apply even if Tamas Hydronic Systems Inc. has been advised of the possibility of such damage.

### **Local Law.**

This limited warranty statement gives the purchaser specific legal rights. The purchaser may also have other rights which vary from state to state in the United States, from Province to Province in Canada and from Country to Country elsewhere in the world.

To the extent this Limited Warranty Statement is inconsistent with local law, this statement shall be deemed modified to be consistent with such local law. Under such local law, certain disclaimers and limitations of this statement may not apply to the purchaser. For example, some states in the United States, as well as some governments outside the United States (including Canadian Provinces), may:

Preclude the disclaimers and limitations in this statement from limiting the statutory rights of a consumer (e.g. United Kingdom);

Otherwise restrict the ability of a manufacturer to enforce such disclaimers or limitations; or

Grant the purchaser additional warranty rights which the manufacturer cannot disclaim, or not allow limitations on the duration of implied warranties.



# Navien Boiler Series

## Notes

This image shows a single sheet of white paper with horizontal ruling lines. The lines are evenly spaced and run across the width of the page. There are no margins, text, or other markings on the paper.




# Tamas Hydronic Panels

## Navien Boiler Series

### Notes

This image shows a single sheet of white paper with horizontal ruling lines. The lines are evenly spaced and run across the width of the page. There are no margins, text, or other markings on the paper.

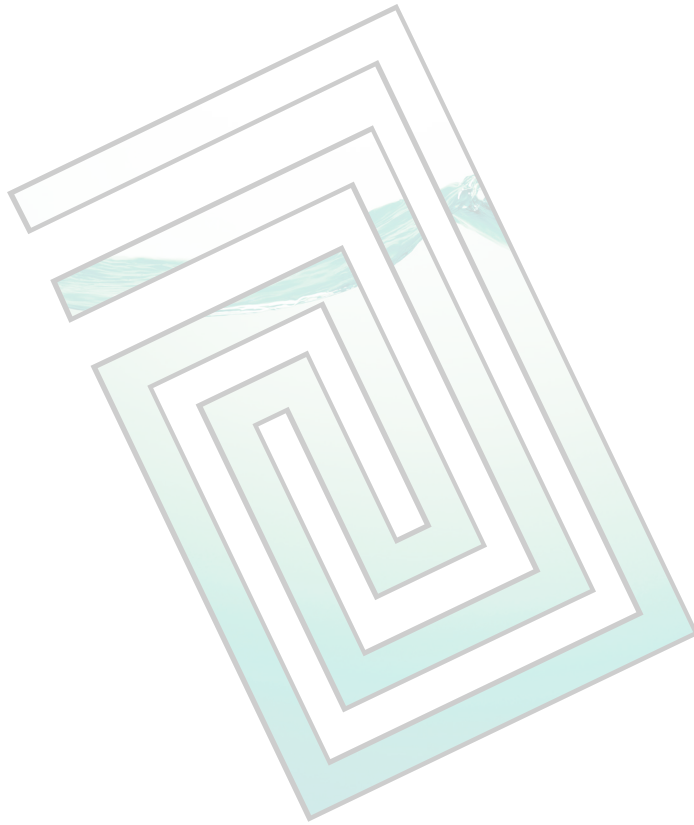

**Custom, Reliable Hydronic Systems**

Tamas Hydronic Systems Inc.  
4516 112 Avenue SE  
Calgary, Alberta T2C 2K2

Phone: 1 (403) 279 0020  
Fax: 1 (403) 279 0747  
info@tamashydronic.com



/TamasHydronicSystems



/TamasHydronic



/company/tamas-hydronic-systems