

Standard Boiler Series

Installation and Commissioning Guide



Introduction..... 3

Components..... 4

Operation..... 5

Technical Data..... 6-7

Wiring..... 8

Modular Expansion Panels..... 9

Commissioning..... 10

Warranty..... 11

This User Guide is Applicable to:

Standard Boiler Panels - No DHW


- T-BO-00-1100-Z* Standard Boiler Panel with Z-Block, (1) Boiler pump, (1) Hi Temp Zone
- T-BO-00-1200-Z* Standard Boiler Panel with Z-Block, (1) Boiler pump, (2) Hi Temp Zone
- T-BO-00-1300-Z* Standard Boiler Panel with Z-Block, (1) Boiler pump, (3) Hi Temp Zone
- T-BO-00-1400-Z* Standard Boiler Panel with Z-Block, (1) Boiler pump, (4) Hi Temp Zone
- T-BO-00-1500-Z* Standard Boiler Panel with Z-Block, (1) Boiler pump, (5) Hi Temp Zone

Standard Boiler Panels - DHW Priority


- T-BO-0D-1100-Z* Standard Boiler Panel with Z-Block, (1) Boiler pump, (1) DHW Zone
- T-BO-0D-1110-Z* Standard Boiler Panel with Z-Block, (1) Boiler pump, (1) DHW Zone, (1) Low Temp Zone
- T-BO-0D-1120-Z* Standard Boiler Panel with Z-Block, (1) Boiler pump, (1) DHW Zone, (2) Low Temp Zone
- T-BO-0D-1130-Z* Standard Boiler Panel with Z-Block, (1) Boiler pump, (1) DHW Zone, (3) Low Temp Zone
- T-BO-0D-1140-Z* Standard Boiler Panel with Z-Block, (1) Boiler pump, (1) DHW Zone, (4) Low Temp Zone

*** Note:**

The following parts lists and application drawings are general samplings. Each panel configuration dictates the required components, including pump type. See the Technical Data section of the manual for specific information on each part in your particular variation of the Tamas I.B.C. Boiler Board.

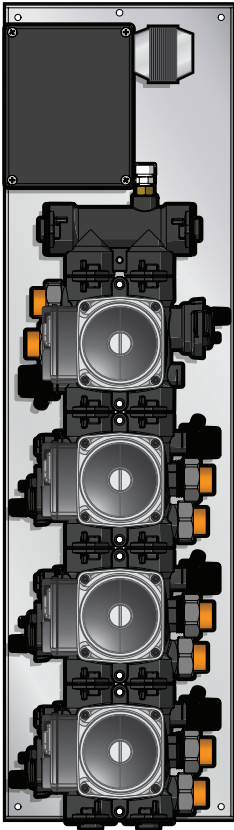

T-BO-00-1300-Z Model Shown

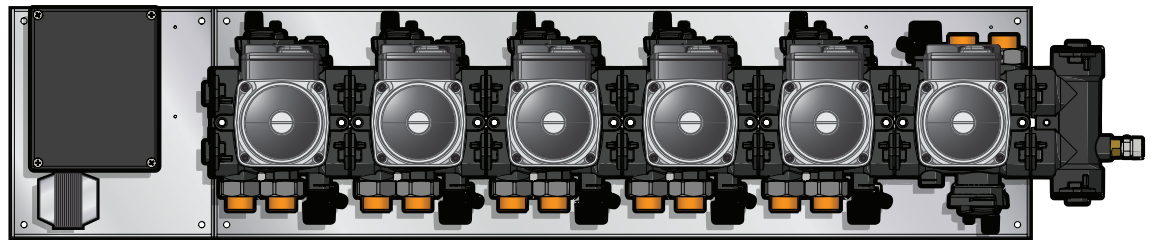

T-BO-00-1500-Z Model Shown

Description

The Tamas Standard Boiler Panel is a distribution panel for heating systems, designed to work with different boiler brands, zone controls, or thermostats.

The panel is easy to install, making it suitable for all skill levels. This unique design allows the Boiler Panel to be installed in a variety of small spaces for new installations or retro-fits. The panel can be installed in a vertical or horizontal orientation.

The panel is available up to 5 zones with an expansion stainless steel Back Plate for the control box.

Installation

Prior to mounting the panel, ensure the wall is capable of supporting the weight of the panel. Ensure that an 115V receptacle is within reach of the 5-foot cord and plug.


Main Features

- Function and pressure tested
- Wide range of flow rates
- Vertical or horizontal installation
- Plug and play
- Certified to CSA 22.2 No. 14-85

Technical Data

- Flow Range: 0-17 US GPM
- Head Range: 0-19 Feet
- Motors: 2 Pole, Single Phase
- Maximum Fluid Temperature: 230 °F (110 °C)
- Minimum Fluid Temperature: 36 °F (2°C)

Components

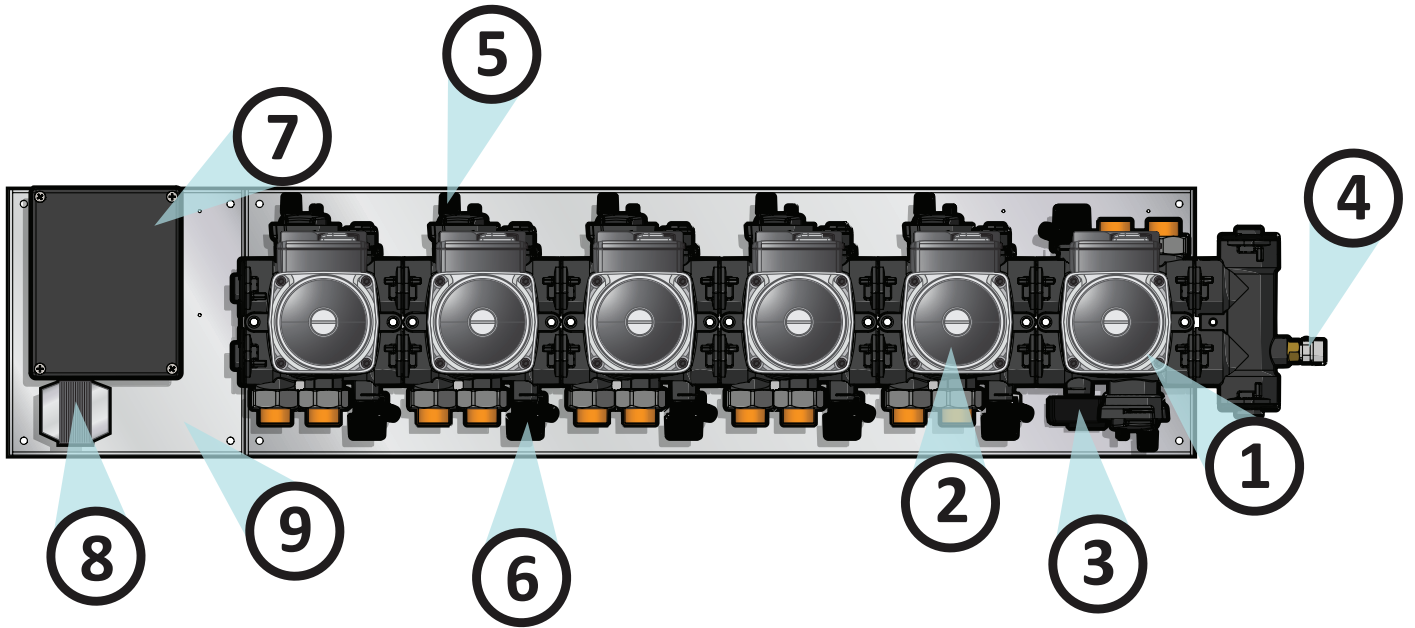

T-BO-00-1500-Z Model Shown

Components	
1	Boiler Pump UPS 15-58
2	Zone Pumps UPS 15-58
3	Pressure & Temperature Sensor
4	Manual Air Vent
5	Automatic Air Vent
6	Purge Valve
7	Tamas Control Box
8	24V Transformer
9	Galvanized Back Pan

Available Accessories



Optional Isolation Valve kits are available for this product.

Operation of the Primary

The primary circuit is composed of a boiler pump and a manual air vent to eliminate the residual air in the system

- When the panel is connected to the boiler, the panel regulates the water distribution quantity to accommodate the demand
- The heating fluid coming from boiler enters in A
- The hydraulic separation permits the dynamic separation of the primary and secondary flow

Operation of the Secondary



On the secondary side, different configurations are possible; one, two, three, four or five zones can be supplied.

If the zone temperature falls below the users designated setting on a thermostat (sold separately), for example, the panel initiates a signal back to the boiler and turns on the boiler pump and zone pumps.

When the zone temperature is satisfied, the thermostat disconnects the boiler and the zone pump.

Operation of the Domestic Hot Water (DHW)



When a domestic hot water demand to the boiler is signaled, the panel disconnects the active zone pumps and sends a message to boiler to rise the internal temperature. This water is heated and distributed as domestic hot water. When the domestic hot water is satisfied; the boiler disconnects the high temperature target output and reverts to the pre-set zone temperatures that were previously active. This method providing precedence to the domestic hot water requirements before the zone heating load of a building is known as domestic hot water priority.

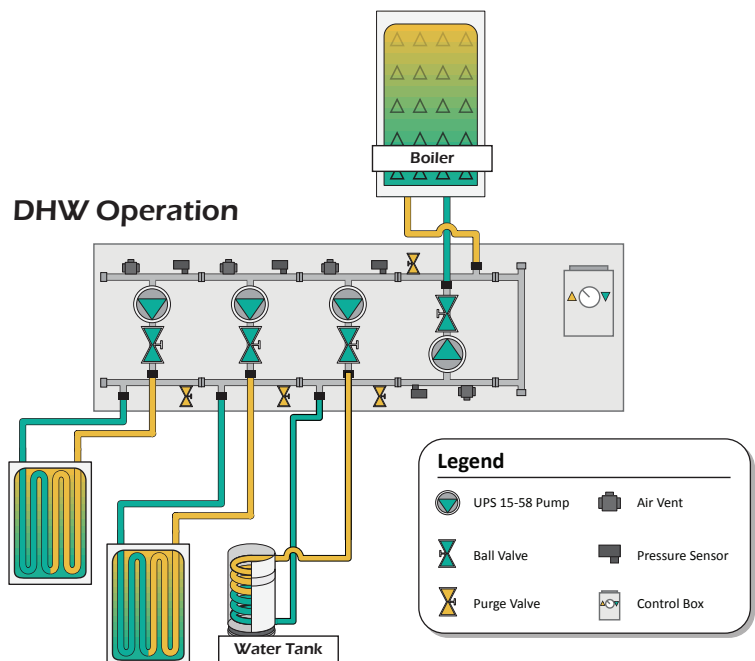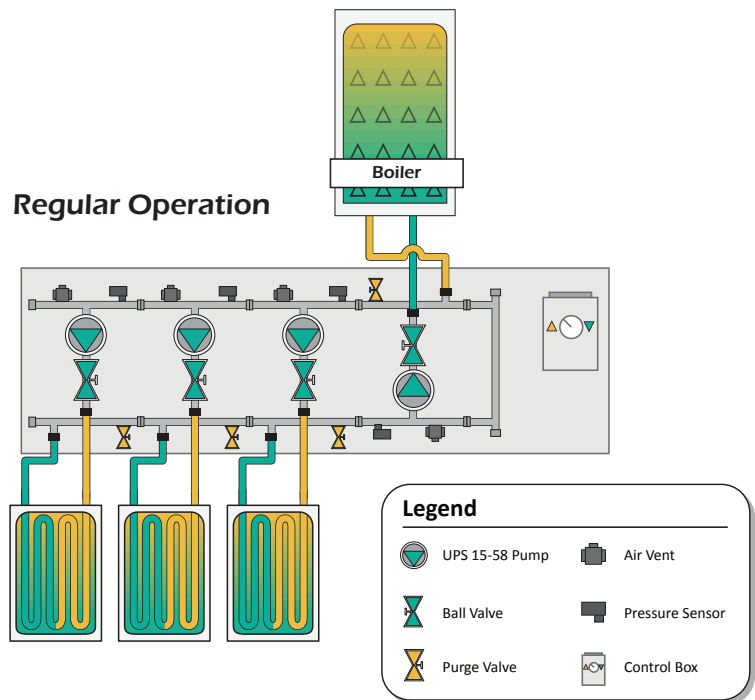

UPS 15-58 Pump



The pump is of the canned rotor type, i.e. pump and motor form an integral unit without shaft seal and with only two gaskets for sealing. The bearings are lubricated by the pumped liquid.

The motor is a 1-phase motor. No additional motor protection is required.

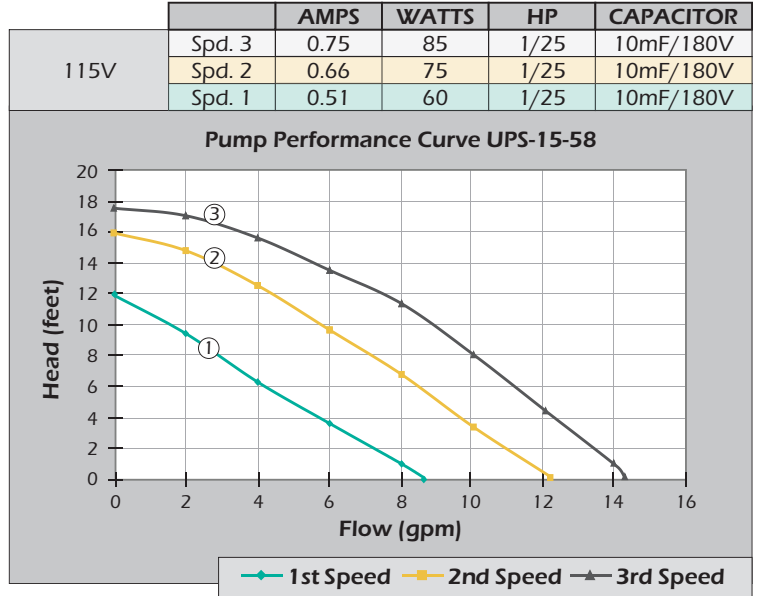
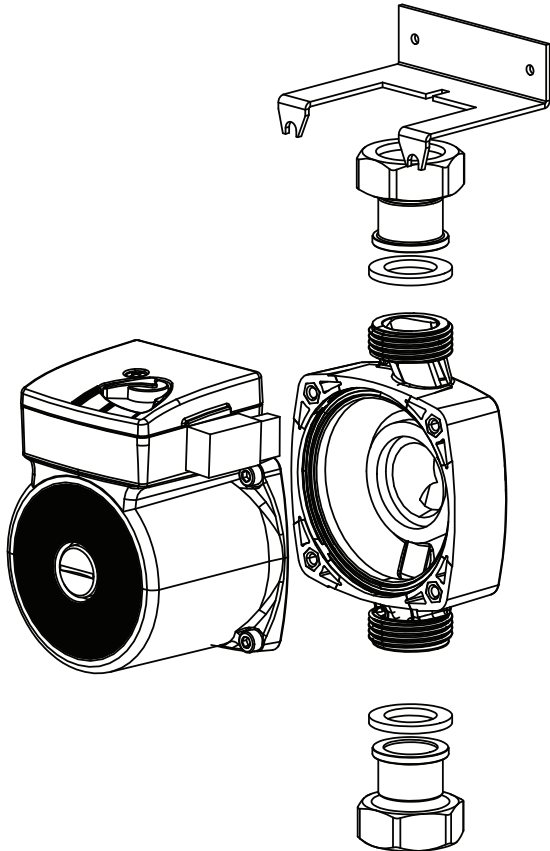


- Flow range: 0 - 17 U.S. GPM
- Head range: 0 - 19 Feet
- Motors: 2 Pole, Single Phase
- Maximum fluid temperature: 230°F(110°C)
- Minimum fluid temperature: 36°F(2°C)
- Maximum fluid temperature with Check Valve present: 200°F

Dimensions

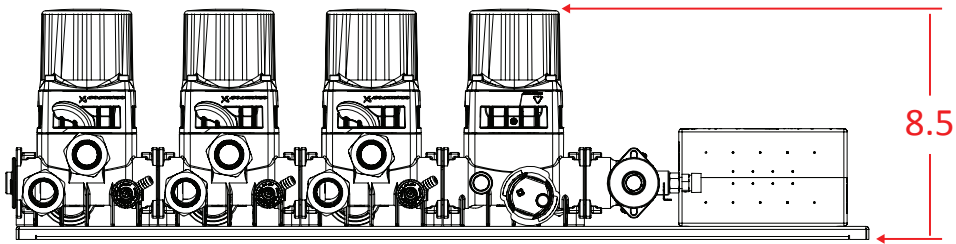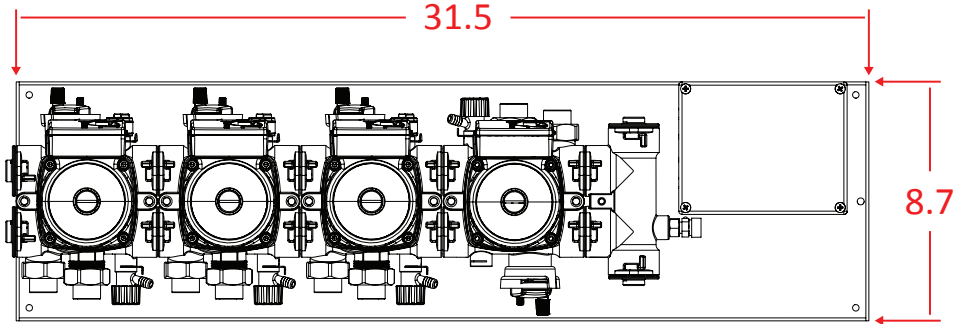

NOTE: Applies to panels with 4 pumps or less. Dimensions are in inches.

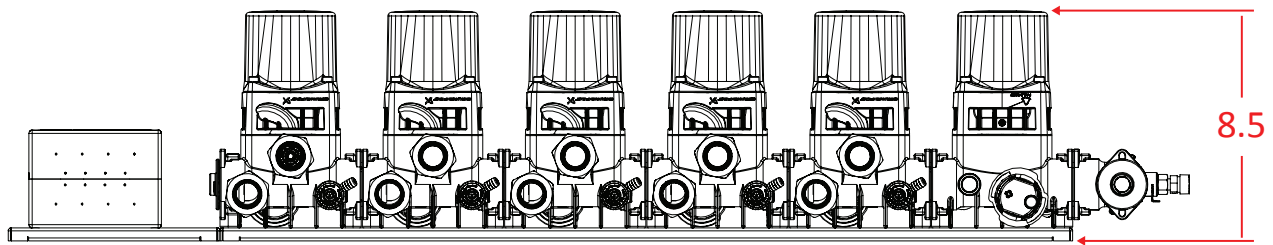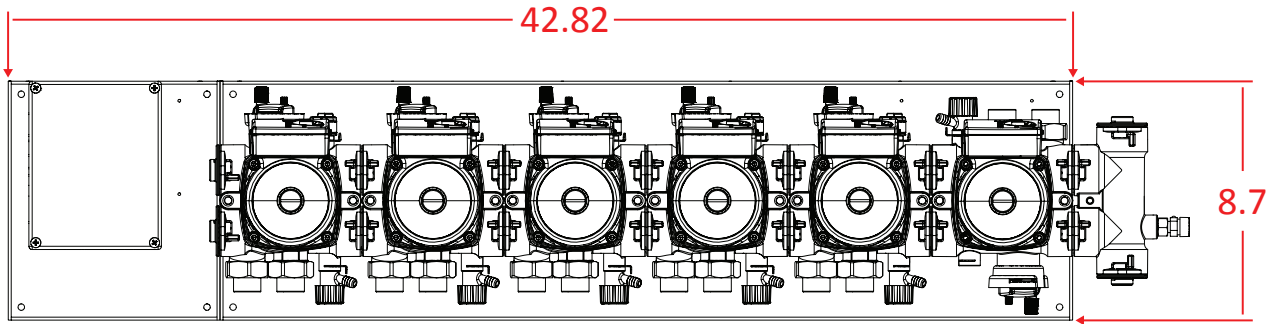


NOTE: Applies to panels with 5 pumps or more. Dimensions are in inches.

Wiring

All electrical wiring to the panel (including grounding) must conform to local electrical codes and/or National Electrical Code, ANS/NFPA No. 70-latest edition, or the Canadian Electrical Code, C22.1- Part 1.


Connections Boiler Panel – Boiler

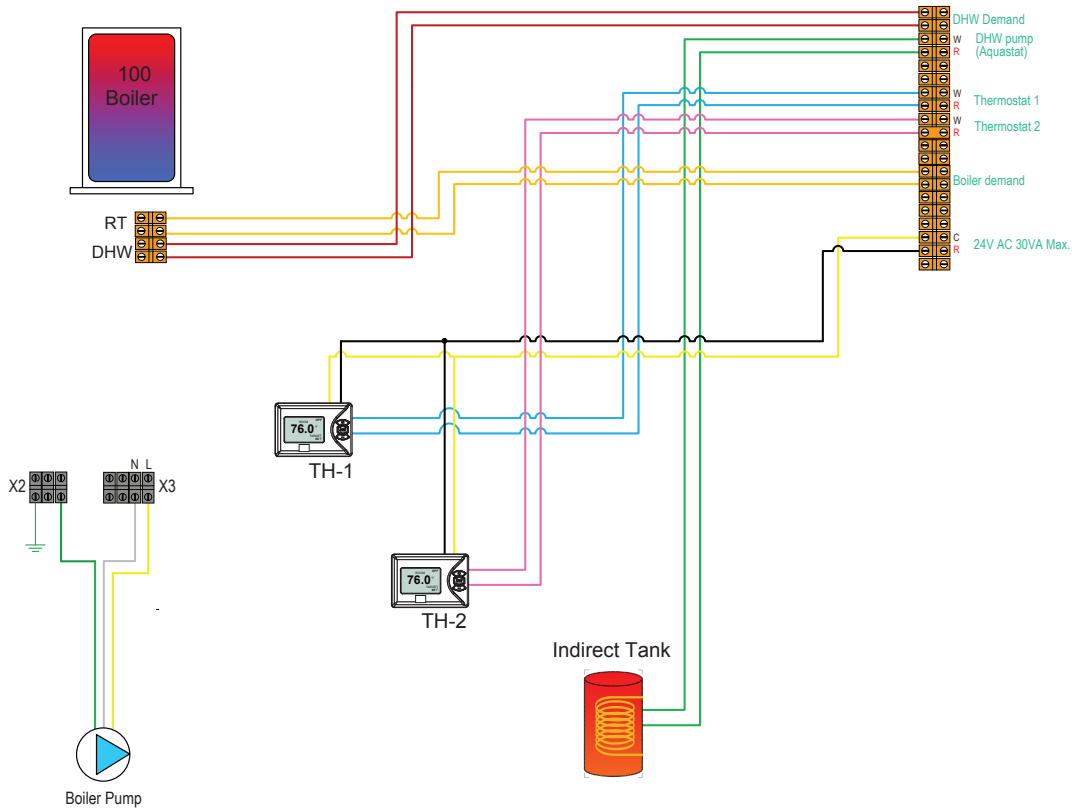


Thermostats

Connect the thermostat for a space heating zone to the terminal block on the Tamas Panel. Do not supply 24V power to the thermostat circuits or attempt to supply 24V AC for any other application.

For the thermostats that require continuous 24V AC power source, connect the thermostat power input to the 24V AC terminal on the Tamas Panel.

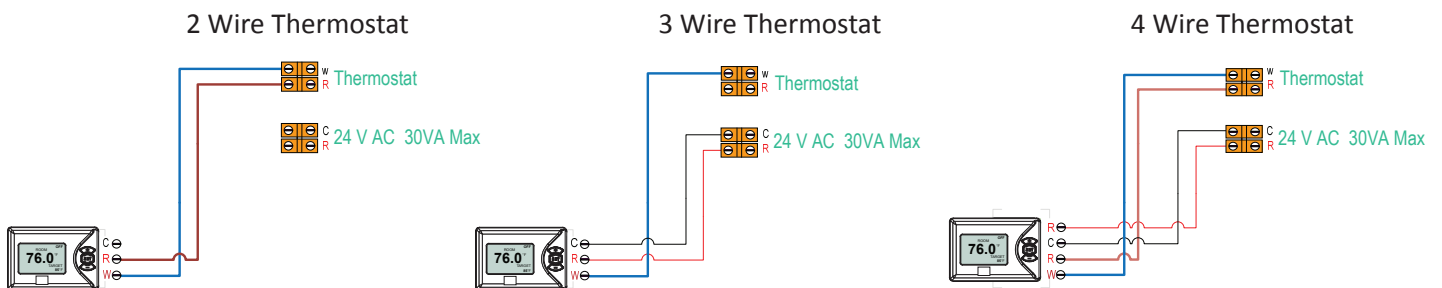

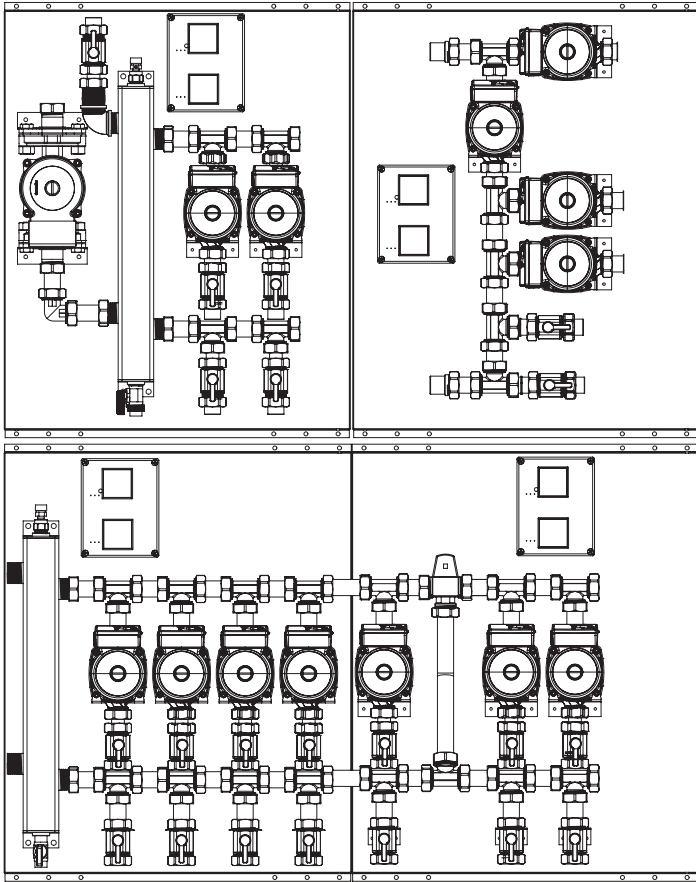


Tamas Hydronics Modular Panels

The Tamas Modular Panel line contains a series of expandable hydronic panels suited for a variety of applications and building sizes.

The comprehensive system provides a versatile method of distributing heat to a multitude of applications. Indoor/ outdoor reset controls are utilized to improve system efficiency and management. Specific panels allow for system expansion, multiple boiler management , injection mixing and domestic hot water.

Available panels: Boiler, Staging, Expansion, Low Temperature Injection (Pump, Valve, TMV)




Safety Precautions

During installation and operation, please avoid injury from touching the hot surface of the pipe. The installation and service should be done by qualified personnel only. Please follow all warning signs on the panel for your own safety while dealing with installation and service.

System Filling Procedure

1. Disconnect power from the Tamas Hydronic panel
2. Close all isolation valves to the zones
3. Begin filling the panel through the provided hose bib connection on the panel
4. Open the return isolation valve on the panel
5. Begin filling the system
6. Slowly open the Manual Purging Valve on the return side of the zone line to let the air out of the system
7. After the above procedure is done, close the air Manual Purging Valve
8. Finally close all the valves to isolate the zone from the panel before moving on to the next zone.
9. Repeat this procedure based on the amount of zones on the board
10. Once all the zones have been purged, you can open all the isolation valves

IMPORTANT This procedure applies to filling the system one zone at a time.

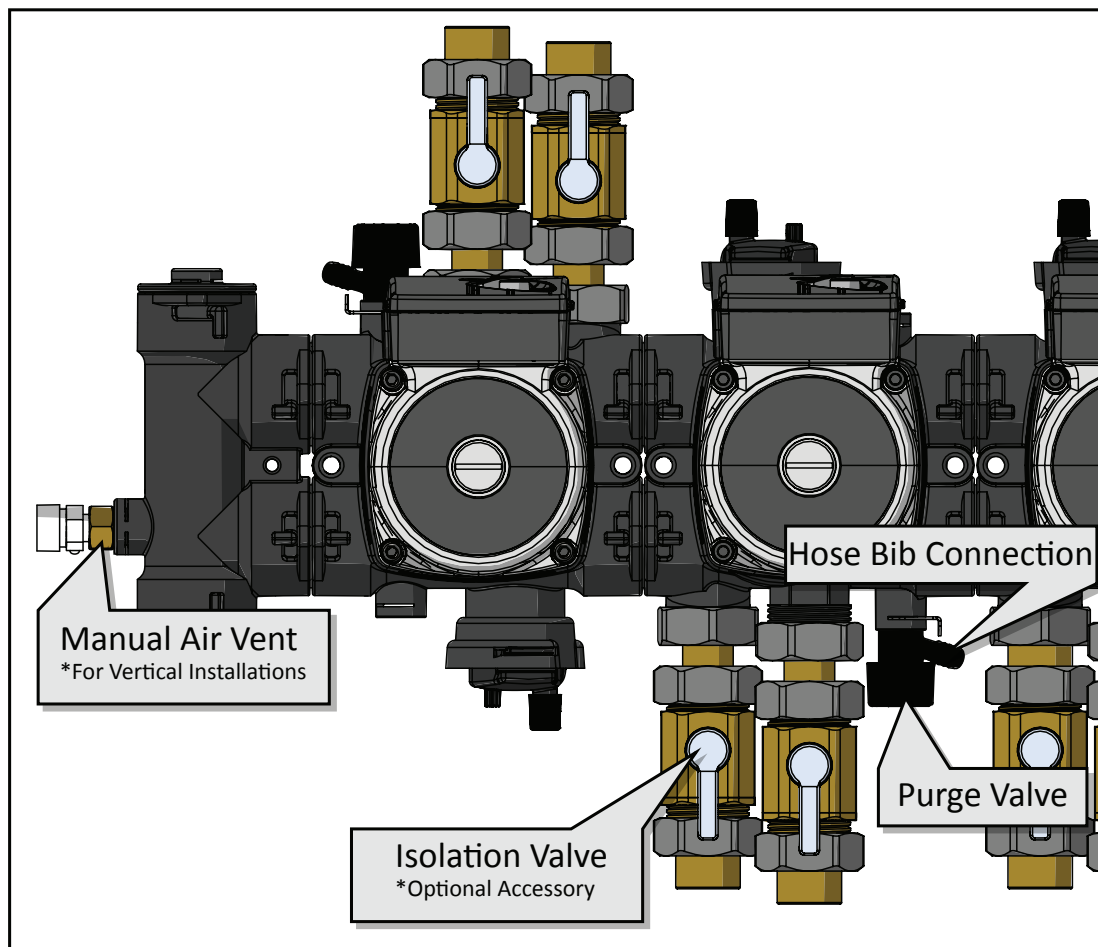



Limited Warranty

Tamas Hydronic Systems Inc. warrants each of its products to be free from defects in workmanship and materials under normal use and service for a period of 24 months from date of purchase from a Tamas Hydronic Systems inc. authorized Dealer.

If the product proves to be defective within the applicable warranty period, Tamas Hydronic Systems inc. on its sole discretion will repair or replace said product. Replacement product may be new or refurbished of equivalent or better specifications, relative to the defective product. Replacement product need not be of identical design or model. Any repair or replacement product pursuant to this warranty shall be warranted for not less than 90 days from date of such repair, irrespective of any earlier expiration of original warranty period. When Tamas Hydronic Systems Inc. Provides replacement, the defective product becomes the property of Tamas Hydronic Systems Inc.

Warranty Service, within the applicable warranty period, may be obtained by contacting your nearest Tamas Hydronics Systems inc. office via the original Authorized Agent and requesting a Return Material Authorization Number (RMA #). Proof of purchase in the form a dated invoice/receipt must be provided to expedite the issuance of a Factory RMA.

After an RMA number has been issued, the defective product must be packaged securely in the original or other suitable shipping package to ensure that it will not be damaged in transit. The RMA number must be visible on the outside of the package and a copy included inside the package. The package must be mailed or otherwise shipped back to Tamas Hydronic Systems Inc. with all costs of mailing/shipping/insurance prepaid by the warranty claimant.

Any package/s returned to Tamas Hydronic Systems Inc. without an approved and visible RMA number will be rejected and shipped back to purchaser at purchaser's expense. Tamas Hydronic Systems Inc. Reserves the right, if deemed necessary, to charge a reasonable levy for costs incurred, additional to mailing or shipping costs.

Limitation of Warranties.

If the Tamas Hydronic Systems Inc. product does not operate as warranted above the purchasers sole remedy shall be, at Tamas Hydronic Systems Inc.' s option, repair or replacement. The foregoing warranties and remedies are exclusive and in lieu of all other warranties, expressed or implied, either in fact or by operation of law, statutory or otherwise, including warranties of merchantability and fitness for a particular purpose/application. Tamas Hydronic Systems Inc. neither assumes nor authorizes any other person to assume for it any other liability in connection with the sale, installation maintenance or use of Tamas Hydronic Systems Inc. products.

Tamas Hydronic Systems Inc. shall not be liable under this warranty; if its testing and examination discloses that the alleged defect in the product does not exist or was caused by the purchasers or third persons misuse, neglect, improper installation or testing, unauthorized attempts to repair or any other cause beyond the range of intended use, or by accident, fire, lightning or other hazard.

Limitation of Liability.

In no event will Tamas Hydronic Systems Inc. be liable for any damages, including loss of data, loss of profits, costs of cover or other incidental, consequential or indirect damages arising out of the installation, maintenance, commissioning, performance, failure or interruption of a Tamas Hydronic Systems Inc. product, however caused and on any theory of liability. This limitation will apply even if Tamas Hydronic Systems Inc. has been advised of the possibility of such damage.

Local Law.


This limited warranty statement gives the purchaser specific legal rights. The purchaser may also have other rights which vary from state to state in the United States, from Province to Province in Canada and from Country to Country elsewhere in the world.

To the extent this Limited Warranty Statement is inconsistent with local law, this statement shall be deemed modified to be consistent with such local law. Under such local law, certain disclaimers and limitations of this statement may not apply to the purchaser. For example, some states in the United States, as well as some governments outside the United States (including Canadian Provinces), may:

Preclude the disclaimers and limitations in this statement from limiting the statutory rights of a consumer (e.g. United Kingdom);

Otherwise restrict the ability of a manufacturer to enforce such disclaimers or limitations; or

Grant the purchaser additional warranty rights which the manufacturer cannot disclaim, or not allow limitations on the duration of implied warranties.

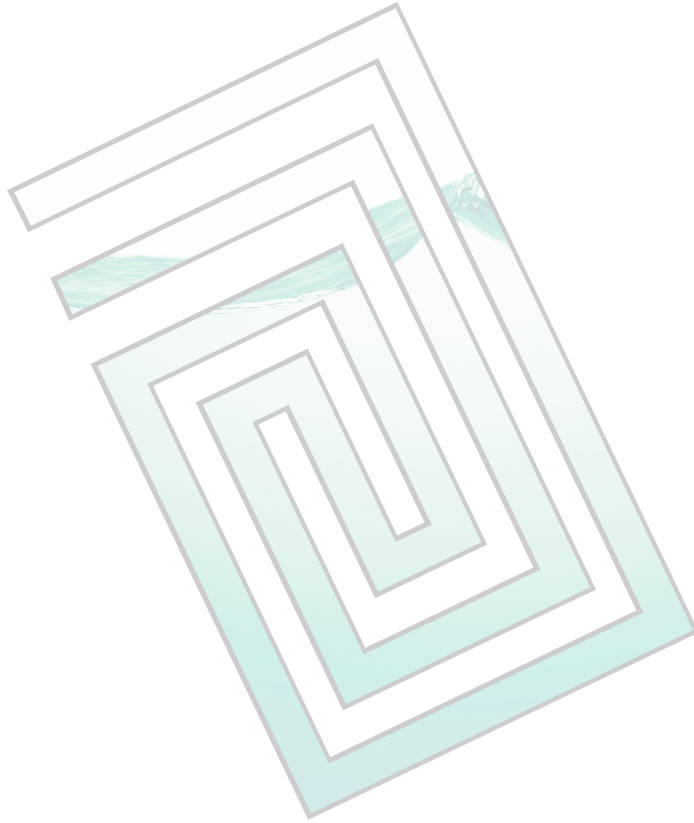

Custom, Reliable Hydronic Systems

Tamas Hydronic Systems Inc.
4516 112 Avenue SE
Calgary, Alberta T2C 2K2

Phone: 1 (403) 279 0020
Fax: 1 (403) 279 0747
info@tamashydronic.com



/TamasHydronicSystems



/TamasHydronic



/company/tamas-hydronic-systems